



WALL MOUNT FABRIC FRAME ASSEMBLY

UNSPLICED

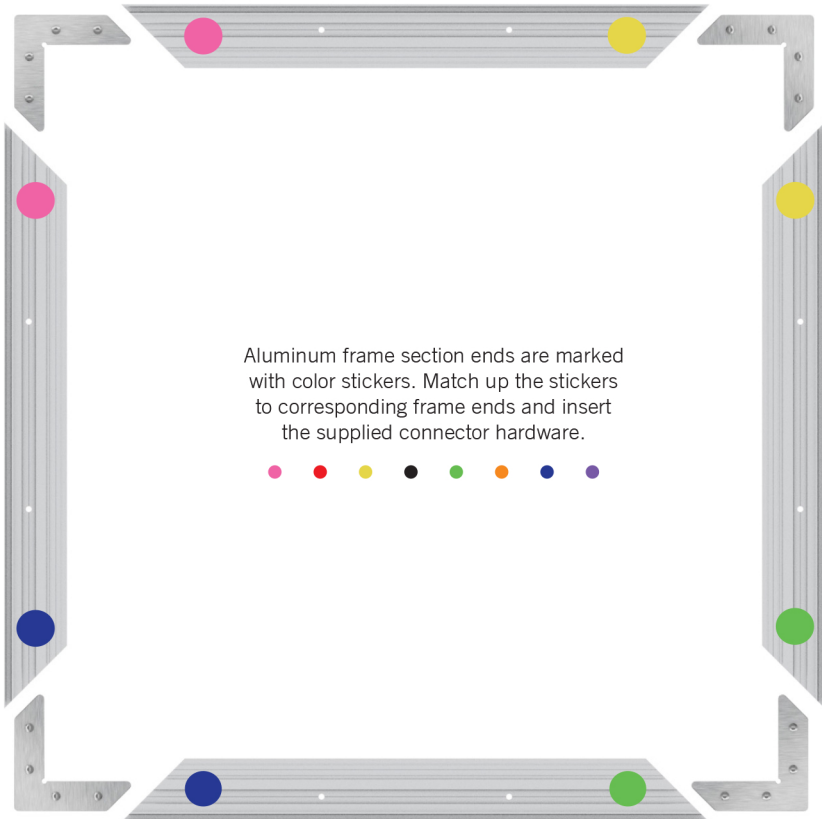

Cross-Section:

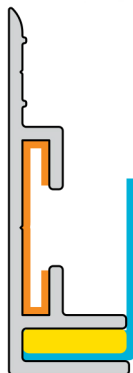

Components:



1/8 Allen Wrench
#2115



Steel Corner
#2000

Step One:

Loosen set screws on the Steel Corners so that they become flush. Insert the Steel Corners into the frame's T-slots.



Tighten set screws just enough to catch until all four Steel Corners are inserted in place.

Step Two:

Correct alignment as needed and tighten all screws with supplied 1/8 Allen Wrench for all four corners of the frame.

Step Three:

See additional assembly guides for Mounting Methods and Silicone Edge Graphic Installation.