


WALL MOUNT FABRIC FRAME ASSEMBLY

SPLICED

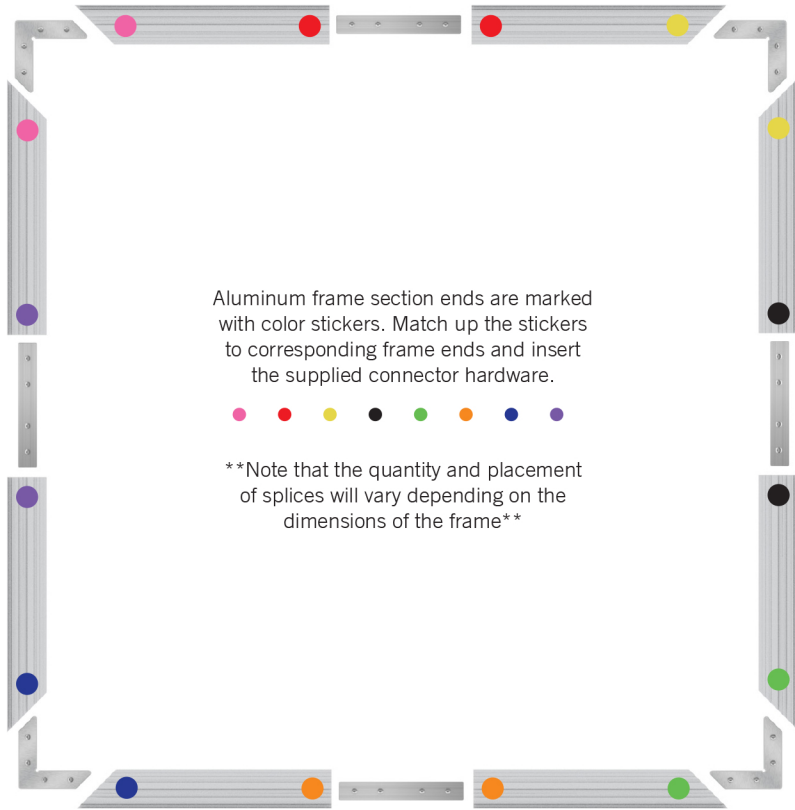

Cross-Section:



Components:



1/8 Allen Wrench
#2115




Steel Corner
#2000



Steel Splice
#2050

Step One:


Loosen set screws on the Steel Splices so that they become flush. Insert the Steel Splices into the frame's T-slots.

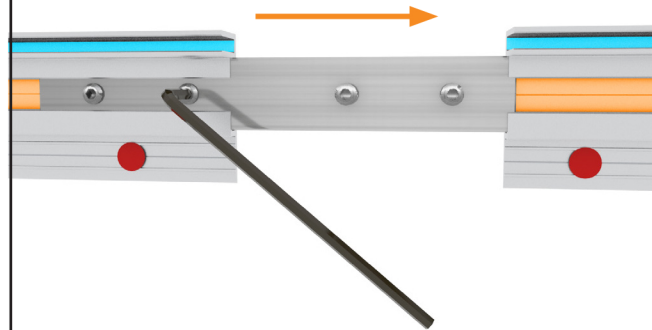

Tighten set screws just enough to catch until all Steel Splices are inserted in place.

Step Two:

Loosen set screws on the Steel Corners so that they become flush. Insert the Steel Corners into the frame's T-slots.

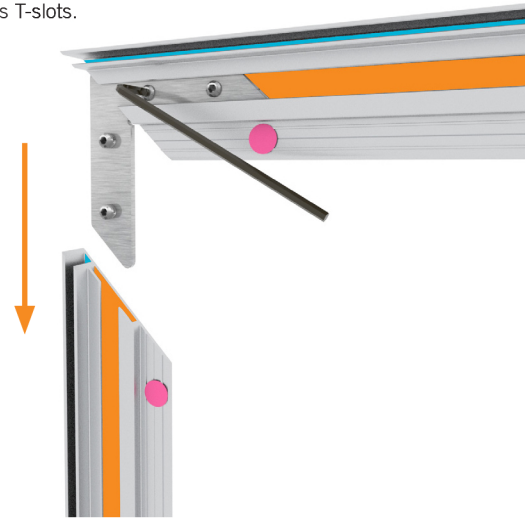

Tighten set screws just enough to catch until all four Steel Corners are inserted in place.

Step Three:

Correct alignment as needed and tighten all screws with supplied 1/8 Allen Wrench for all corners and splices of the frame.

Step Four:

See additional assembly guides for Mounting Methods and Silicone Edge Graphic Installation.